

877-938-7757

[www.wetsounds.com](http://www.wetsounds.com)

2975 Louise St.

Rosenberg, Texas 77471 USA


# WS-MC-2/5-FMK

w e t s o u n d s


## WS-MC-2/5-FMK

Flush Mount Kit for MC-2/MC-5


### Installation Guide

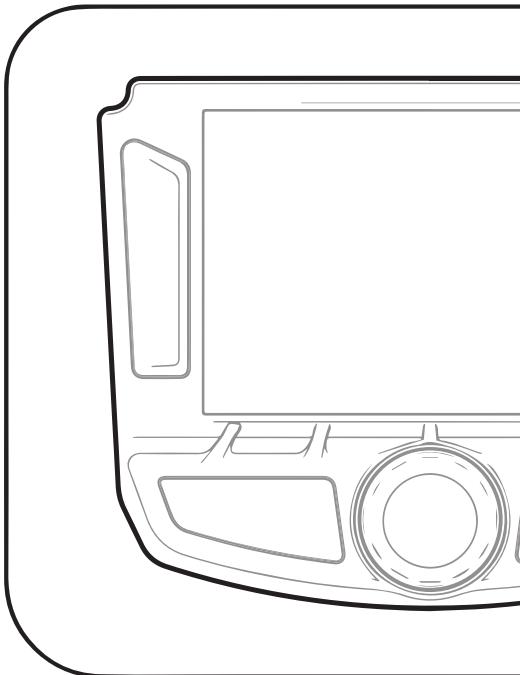


# Installation Guide

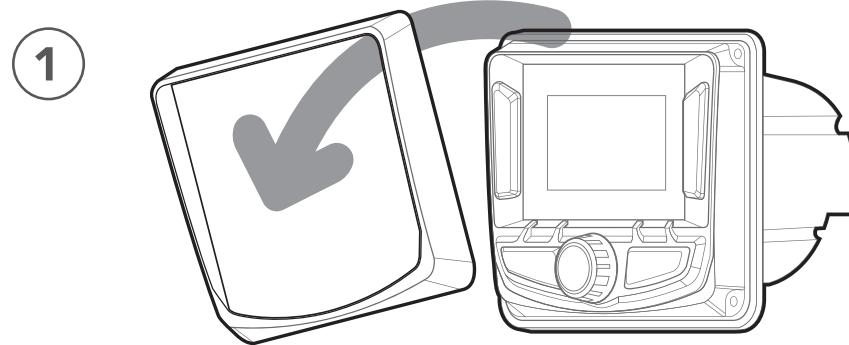


- Remove Surface Mount trim using a soft trim tool to release plastic locking clips.

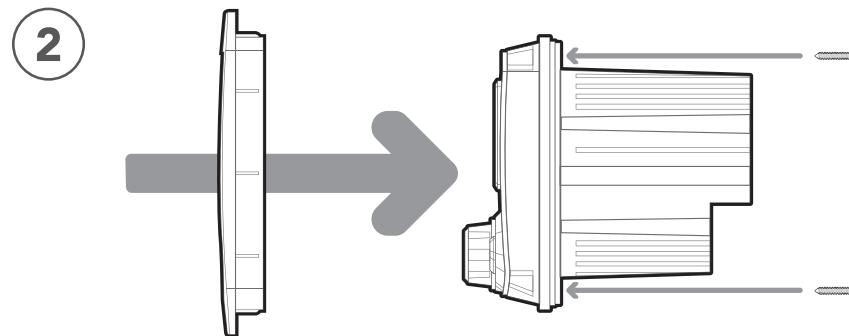


- Attach Flush Mount trim using the (4) screws included in the kit.

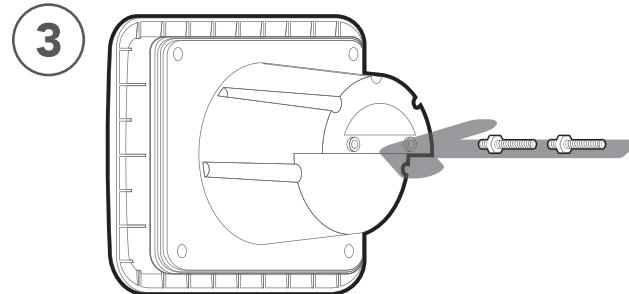


- Attach long mounting screws to the back of the unit.

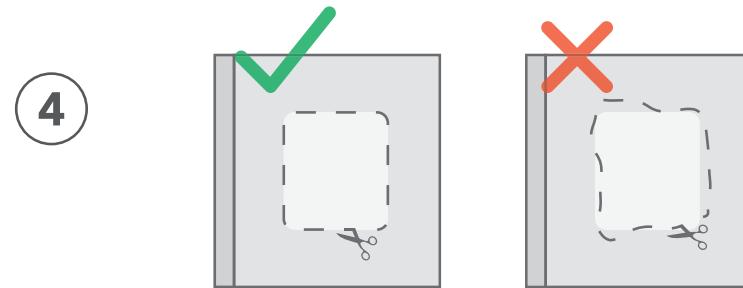


- Use a template to mark a cut line. Avoid cutting outside the cut line to prevent improper fitment. Recommend taping the surrounding surface to prevent damaging the surface.

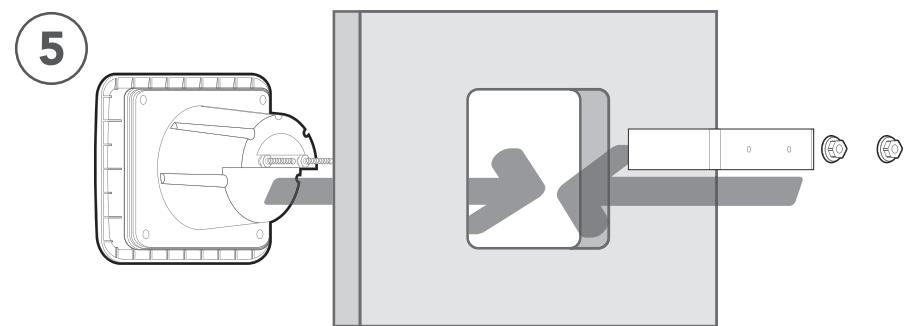


- Place unit into the opening and use the aluminum U-shaped bracket to sandwich the dash between the unit and rear bracket. Tighten the bracket to fit a variety of wall thicknesses.

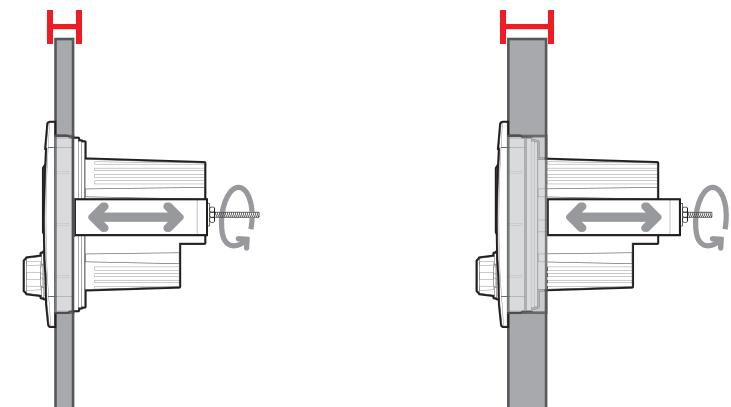

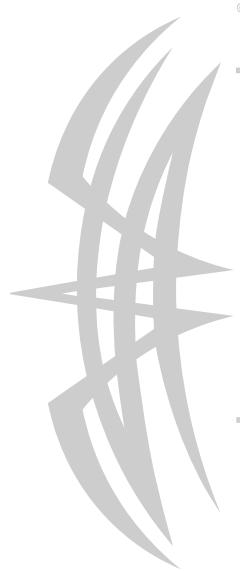

w e t s o u n d s®

Cut Line Template

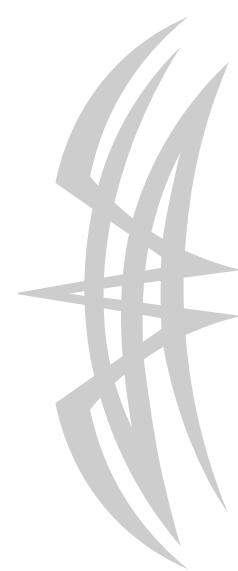

w e t s o u n d s®

Cut Line Template

