

ATV-AC-SUB10 - Prowler Center Console Sub Box

Tools Needed For Installation

Drill with 1/4" Drill Bit
Phillips Screwdriver / Cordless drill
Wire Crimpers / Strippers



Installation Instructions:




If the Subwoofer is not already mounted in the box, do so now using the screws provided (we recommend you pre drill the holes using a 1/8" drill bit to make screwing in the subwoofer easier. Drill a 1/4" hole in the lower front of the box to run the speaker wire out of the enclosure. **NOTE: Sealing this hole to prevent air leaking will improve sound quality**

Run the subwoofer wire through the gap in the floorboard to the location that you are running your amplifier



Place the enclosure on the passenger side footwell and lift the box onto the center hump, lift the driver side higher and slide in using a sideways motion

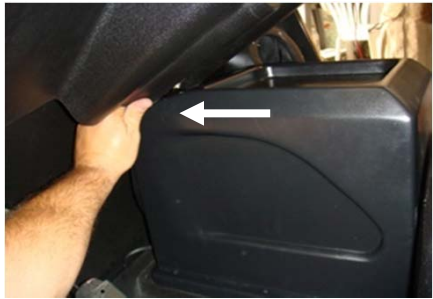

You will need to press the dash up as shown while sliding the box over the hump



Continue sliding the box over the hump till it sits in place and makes good contact with the floorboard



Once the enclosure is in place, screw the 6 mounting screws into the floor using a phillips screw bit in a cordless drill

After the enclosure is mounted, pull any remaining speaker wire under the center of the dash. You can now connect the speaker wires to the amplifier

