


ATV-CM-F65 and ATV-CM-F650 CM Front Kick Panel

Tools Needed For Installation

Drill with 1/4" Drill Bit
7/16 Open End Wrench
5/32 Allen Wrench
T-30 Torx Wrench
Wire Crimpers / Strippers

Installation Instructions:

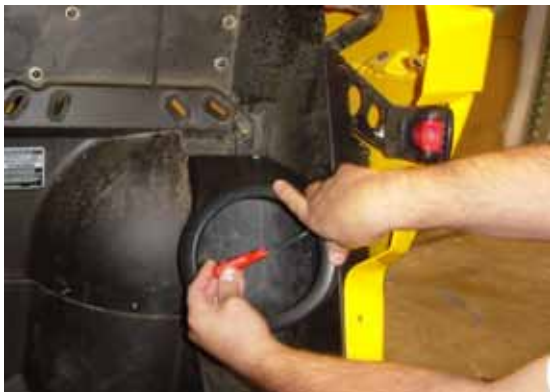

Align the kick panel in flat spot above the foot rest of the firewall and mark the 3 mounting holes



After marking the holes, drill the mounting holes using a 1/4" drill bit



Drill a hole in the top of each kick panel, this is where the speaker wire will run out of. Sealing this hole will give you better sound from the speaker



Once all the holes are drilled, mount the kick panel in the Commander, we recommend putting the nut on the inside of the kick panel, removing the 4 - T-30 Torx along the side of the vehicle will make this step easier



will make this step easier



After securing the allen bolts with the 7/16 nuts run your speaker wire into the kick panel



After attaching the speaker wires to the speaker install the speaker into the Wet Sounds kick panel after the 4 screws are secured secure the grill over the speaker



Wet Sounds Inc. 9330 West Airport Blvd Suite 170 Houston, TX 77031
www.wetsounds.com 1-877-938-7757