


ATV-CM-R65 and ATV-CM-R650 CM Rear Kick Panel

Tools Needed For Installation

Drill with 1/4" Drill Bit
7/16" Open End Wrench
5/32" Allen wrench
T-27 and T-30 Torx Wrench
Wire Crimpers / Strippers

Installation Instructions:

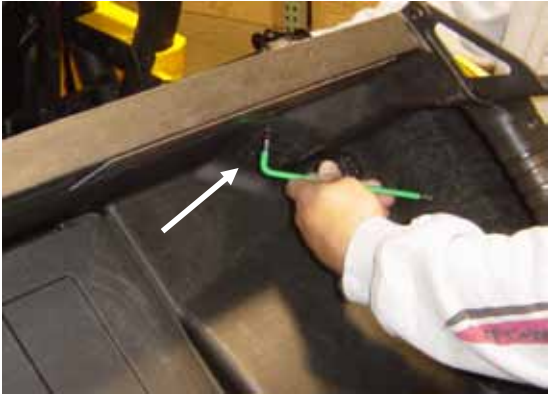

Tilt the bed of the Commander, Remove the factory front tie downs using the T-30 and the 7/16 Wrench, reinstall the hardware to hold the bed tilt mechanism in place.



Hold the speaker pod in place and mark the mounting holes



Remove the 4 T-27 torx from the bedside rail



Drill a hole through the bed where your holes were marked, use caution and be sure not to drill through the plastic bedside



Once all the holes are drilled, mount the kick panel in the Commander, we recommend putting the nut on the inside of the kick panel.



After securing the allen bolts with the 7/16 nuts run your speaker wire into the kick panel



After attaching the speaker wires to the speaker install the speaker into the Wet Sounds kick panel.



Install the grill over the speaker

