

ATV-KT-SUB10- Teryx Center Console Sub Box

Tools Needed For Installation


Drill with 1/4" and 11/32" Drill Bit

Phillips Screwdriver

Wire Crimpers / Strippers

2 - 14mm Wrenches

Installation Instructions:

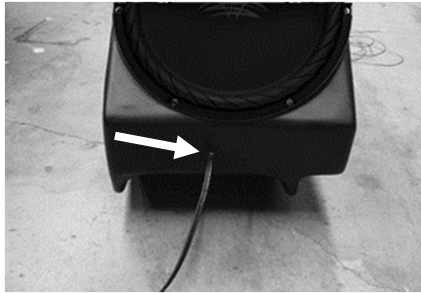

If the Subwoofer is not already mounted in the box, do so now using the screws provided (we recommend you pre drill the holes using a 1/8" drill bit to make screwing in the subwoofer easier. Drill a 1/4" hole in the lower front of the box to run the speaker wire out of the enclosure. **NOTE: Sealing this hole to prevent air leaking will improve sound quality**

Run the subwoofer wire to the location that you are running your amplifier



Place the enclosure on the passenger side footwell and lift the box onto the hump, lift the back higher and slide in using a sideways / forward motion



Once the enclosure is in place, press down on the top of the enclosure to insure it is snug against the center hump, while still applying pressure to the top of the box drill the 6 mounting holes using a 11/32 drill bit



Then thread one Acorn nut and washer onto the threaded rod, insert from the passenger side and slide through the center hump so that the treaded end comes through the hole on the driver side, repeat this for the other mounting locations. Once all the threaded rods are inserted put a washer, then an Acorn nut on the remaining side, Using 2 - 14mm wrenches tighten the Acorn nuts. They need to be snug, **DO NOT OVER TIGHTEN**

After the enclosure is mounted, pull any remaining speaker wire under the center of the dash. You can now connect the speaker wires to the amplifier



Wet Sounds Inc. 9330 West Airport Blvd Suite 170 Houston, TX 77031

www.wetsounds.com 1-877-938-7757