

ATV-RZR-SUB10 - Razor Under Dash Sub Box

Tools Needed For Installation

Drill with 1/4" Drill Bit
Phillips Screwdriver
Wire Crimpers / Strippers
7/16 Socket

Installation Instructions:




We recommend Pre drilling the holes using a 1/8" drill bit to make screwing in the subwoofer easier. Drill a 1/4" hole in the lower top of the box to run the speaker wire out of the enclosure. **NOTE: Sealing this hole to prevent air leaking will improve sound quality**

While holding the enclosure place the U-bolt from the top down through the enclosure, next place the backing plate on and then tighten the nuts using a 7/16" socket wrench, repeat this for the 2nd U-bolt



Once the enclosure is hung with the U-bolts, Pre drill the mounting holes in the back of the box toward the firewall

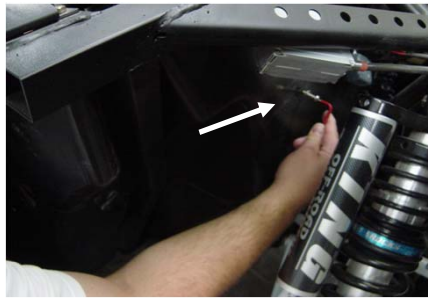

Secure the back of the box using the provided Allen screws and washers the Allen head goes toward the outside of the vehicle so the nut is inside the enclosure



After the enclosure is mounted, pull any remaining speaker wire under the dash and mount the speaker in the box.



Screw the speaker in tightly and seal any holes **NOTE: Sealing holes to prevent air leaking will improve sound quality,**

You can now connect the speaker wires to the amplifier

