

ATV-RZR2-F65 and ATV-RZR2-F650 RZR2 Front Kick Panel

Tools Needed For Installation

Drill with 1/4" Drill Bit

7/16 Open End Wrench


5/32 Allen Wrench

Wire Crimpers / Strippers

Installation Instructions:



Align the kick panel against the firewall and side (under the glovebox on the passenger side & mid way up the firewall on the driver side), you will be able to tell where the pod sits based on the back sitting flush against the firewall. Then mark the 3 mounting holes

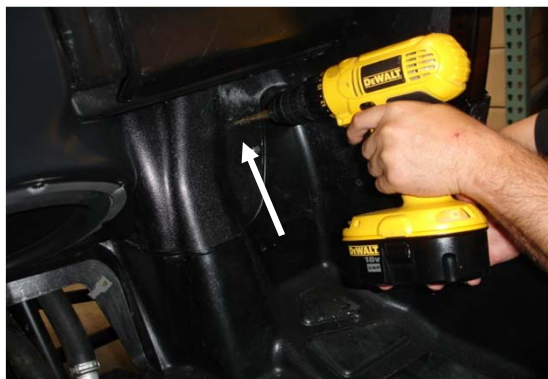

After marking the holes, drill the mounting holes using a 1/4" drill bit



Drill a hole in the top of each kick panel, this is where the speaker wire will run out of. Sealing this hole will give you more sound from the speaker



Once all the holes are drilled, mount the kick panel in the RZR, we recommend putting the nut on the inside of the kick panel



After securing the allen bolts with the 7/16 nuts run your speaker wire into the kick panel



After attaching the speaker wires to the speaker install the speaker into the Wet Sounds Works kick panel after the 4 screws are secured secure the grill over the speaker



Now, repeat installation process for the second side



CORPORATE: SSV WORKS, 19528 VENTURA BLVD. #158 TARZANA, CA 91356
WEB: www.SSVworks.com FAX: 866-293-6751