

# ATV-RZR2-SUB10 - Razor Under Dash Sub Box

## Tools Needed For Installation

Drill with 1/4" Drill Bit  
Phillips Screwdriver  
Wire Crimpers / Strippers  
Torx T-25 and T-27

## Installation Instructions:



You will begin by removing the 2 plastic pop tabs at the front of the dash



Remove top of shifter knob then remove entire knob with a T-25 torx, then remove all the T-25 torx around the center console and remove completely. You are now ready to install the subwoofer enclosure



Drill a 1/4" hole in the top of the box to run the speaker wire out of the enclosure.



We recommend pre drilling the holes using a 1/8" drill bit to make screwing in the subwoofer easier. Connect the speaker inside to the speaker wire you ran into the enclosure and screw the speaker in tightly into the enclosure. **NOTE: Sealing holes to prevent air leaking will improve sound quality. At this time, double check all the screws holding the mounting brackets on for tightness, make sure they are secure before installing**



Remove the T-27 torx screw from the "firewall" directly above the floor opening where the lower panel and upper panels meet




Remove the clip that held the screw from the inner passenger wheel well, you will not use the clip and the torx that were removed



From the passenger side, slide/lift the enclosure into place, This will be slightly more difficult if you have power steering, you will need to go in at an angle and get the power steering provision around the power steering box



Once the enclosure is in, you will lift it into position, lining up the 2 holes on the front and the single hole on the side as indicated below

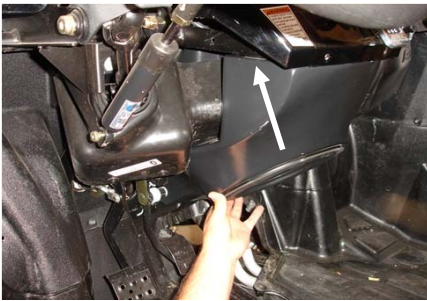

Locate the mounting hole on the driver side of the enclosure, Using the screw provided, mount this screw through the metal bracket through the hole in the RZR dash



Locate the mounting holes on the front side of the enclosure, Using the screws provided, mount these screw through the metal bracket through the holes in the RZR dash



Using your left hand, apply upward pressure to the enclosure pressing it to the firewall and lining up the mounting nut to the hole in the firewall where the torx was removed



While holding the enclosure with your left hand, screw the provided screw into the mounting tab and nut with your right hand, be sure to line this up and begin to thread the screw with your hand to avoid stripping out the nut, once you can easily thread the screw into the nut and you are sure it is lined up, use a screwdriver to tighten the enclosure to the firewall

You can now wire the speaker wire to the amplifier and re-install your center console and shift knob

